




Flare Nut Sockets

3300FN-21 3/8 Sq. Dr. Flare Nut Socket size 21mm

Strut Nut socket *BMW E90, MINI R56 etc.



3300FN (mm)	D ₁ (mm)	D ₂ (mm)	H (mm)	L (mm)	S (mm)	⚖ (g)
21	30	27.5	15	80	15.5	170

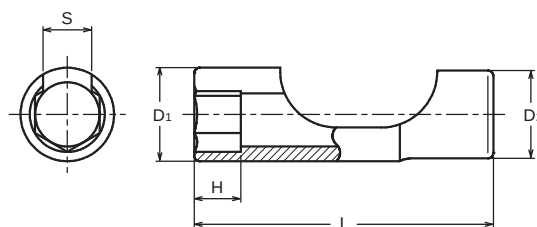

3300FN 3/8 Sq. Dr. Flare Nut Socket

Different sizes are also available and good to use for Strut Nut work.



3300FN (mm)	D ₁ (mm)	D ₂ (mm)	H (mm)	L (mm)	S (mm)	⚖ (g)
8	14.5	17.3	6	53	6.4	38
9	16	17.3	7	53	6.8	41
10	16.8	17.2	7.5	53	7.2	42
11	18	17	8.5	53	8.3	42
12	20	18	9	53	8.8	50
13	21.1	20	9.5	62	9.4	66
14	22	20	10.5	62	10.5	66
15	23	22	11	70	11.5	82
16	24	23	11.5	70	12	90
17	25	24	12.5	80	13	110
18	27	25	13	80	13.5	120
19	28	26	14	80	14.5	130
21	30	27.5	15	80	15.5	170
22	32	29.5	16	80	16	180
24	34.5	31.5	17	80	17	200

<http://www.koken-tool.co.jp/en/>

Reproduction in whole or in part without proper and prior authorization is prohibited.